






POWER SUPPLY

The schematic diagram illustrates the power supply circuit for the EPD display module. It includes the following components and connections:

- Input and Filtering:** The input VIN is connected to a network of capacitors (C28, C29) and resistors (R26, R27, R28, R29) to filter and regulate the voltage.
- TPS22913BZV1 (U5):** This is a dual-channel PMOS/PMOS/PMOS/PMOS switcher. Its VIN pin is connected to the input, and its VOUT pin is connected to the output. The ON pin is connected to ground, and the GND pin is connected to ground.
- Output and Regulation:** The output of the switcher is connected to the EPD VDD pin. The output is also connected to a network of capacitors (C29, C30) and resistors (R28, R29) to filter and regulate the voltage.
- AVDD and VDDIO:** The AVDD pin is connected to the output of the switcher. The VDDIO pin is connected to the output of the switcher. The VDDIO pin is also connected to a network of capacitors (C33, C34) and resistors (R33, R34) to filter and regulate the voltage.
- Other Components:** The circuit includes several inductors (L4, L5) and capacitors (C28, C29, C30, C31, C32, C33, C34) for filtering and regulation. Resistors (R26, R27, R28, R29, R30, R31, R32, R33, R34) are used for current limiting and voltage division.

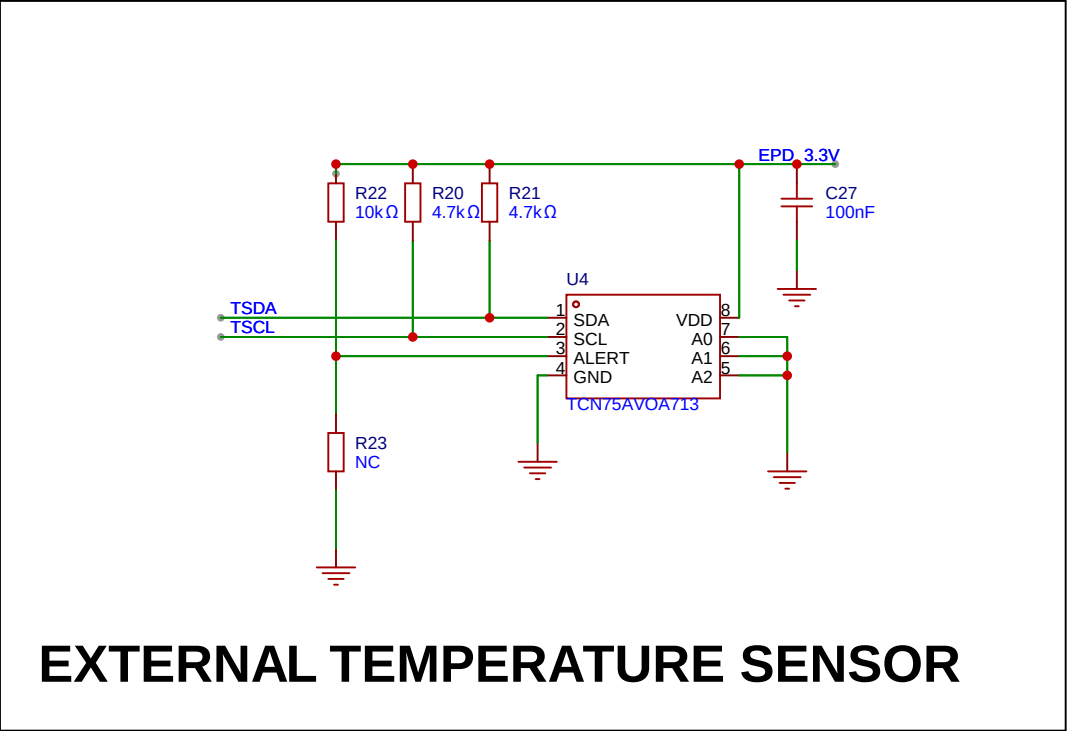

Pinout diagram for PZ254V-11-12P connector. The diagram shows a 12-pin connector with pins numbered 1 to 12. The signals are: 1: H1, 2: 1, 3: 2, 4: RST N, 5: BUSY N, 6: CSB M, 7: CSB S, 8: DC/X, 9: SI3, 10: SI2, 11: SI1, 12: SIO. A red box highlights pins 1 through 12.

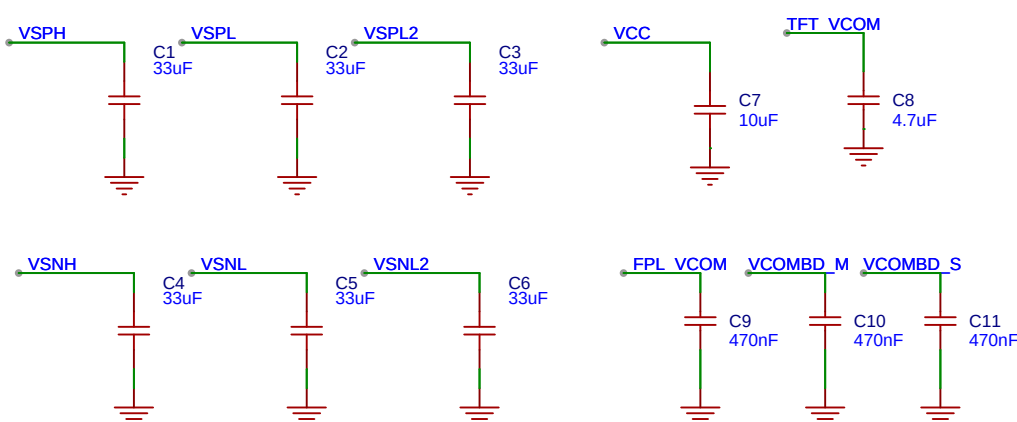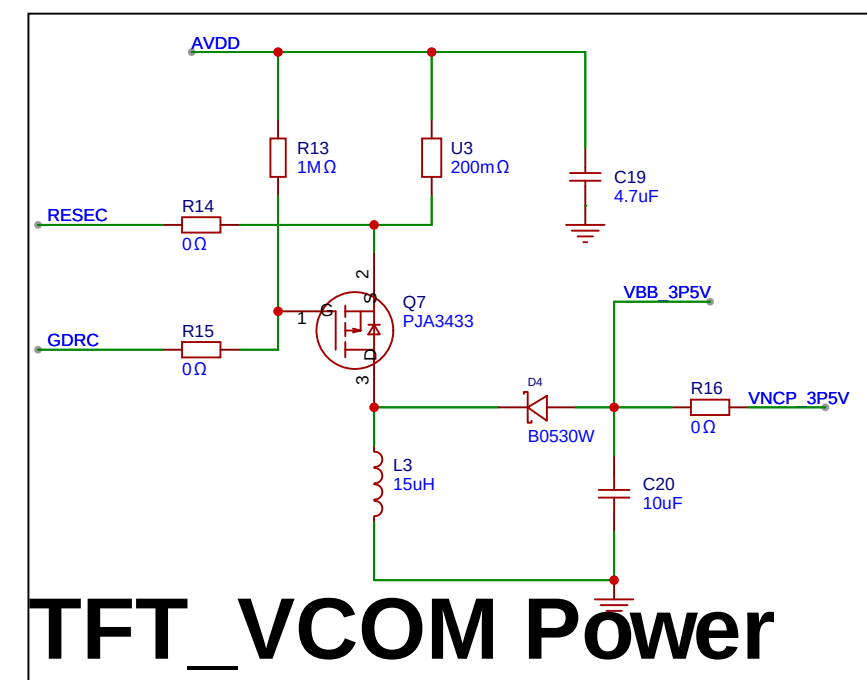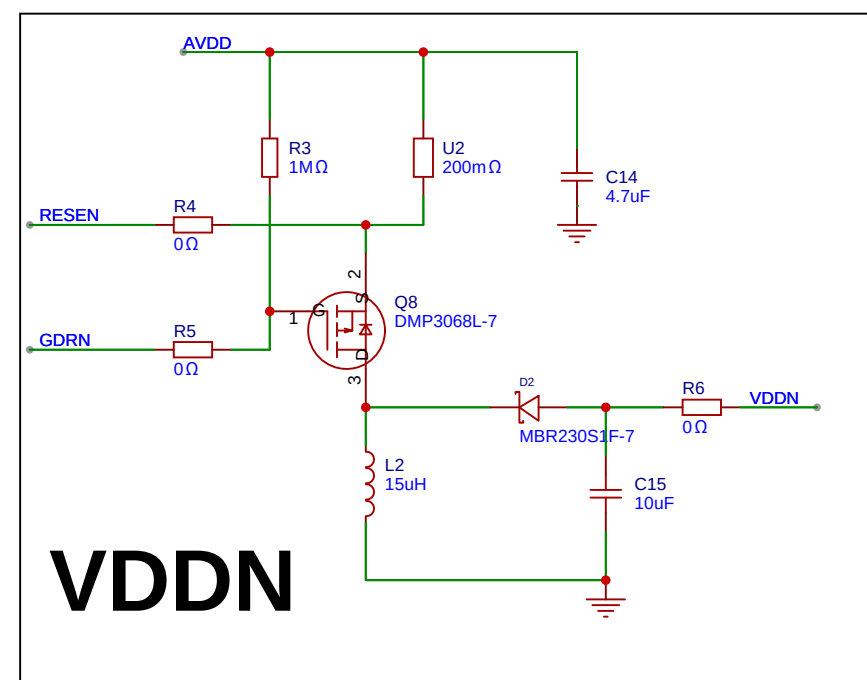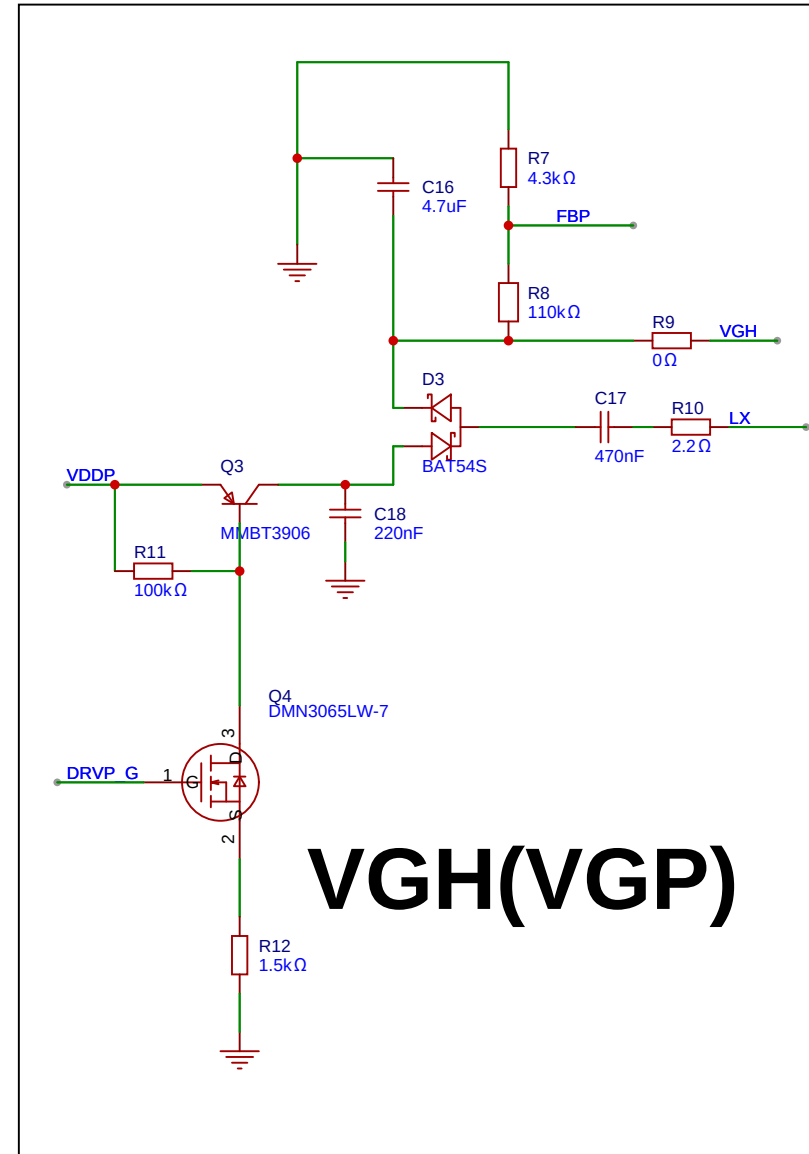

原理图	Schematic1			更新日期	2024-07-17
图页	P1			创建日期	2024-05-08
绘制	1	13.3E6			
审阅					
		版本	尺寸	页	1 共 1
		V1.0	A4	GoodDisplay	